

Pioneer

Installation guide for:

- SPH-EVO950DAB-T
- SPH-EVO107DAB-T
- SPH-EVO98DAB-T
- SPH-DA97DAB-T



**Ford Transit - V362MCA + V363MCA
From 2018 onwards**



Interface

Depending on the kit, the interface may look different



Pre-assembled SPH-EVO950DAB unit with
Ford Transit installation kit


Steps 1 - 7 are for vehicles with OEM touch screen unit only.



Original dashboard setup
with 5" / 7" / 8" touch screen head unit.



Remove the cover right behind the top of the
screen and remove the three screws.

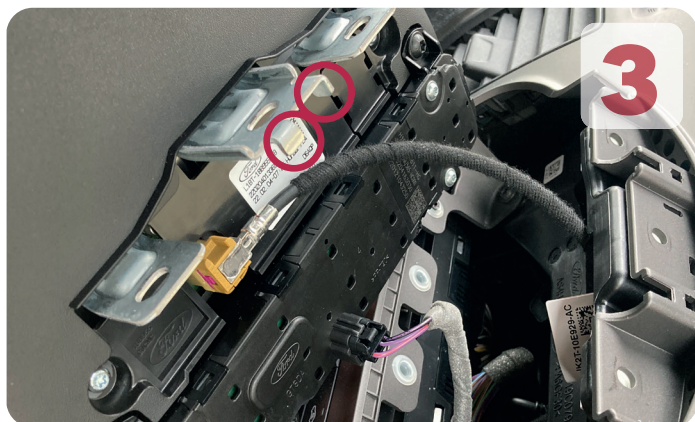


Slightly lift the unit and remove it from the
dashboard. Remove the two connectors.



Remove the original frame from the dashboard.

Pioneer

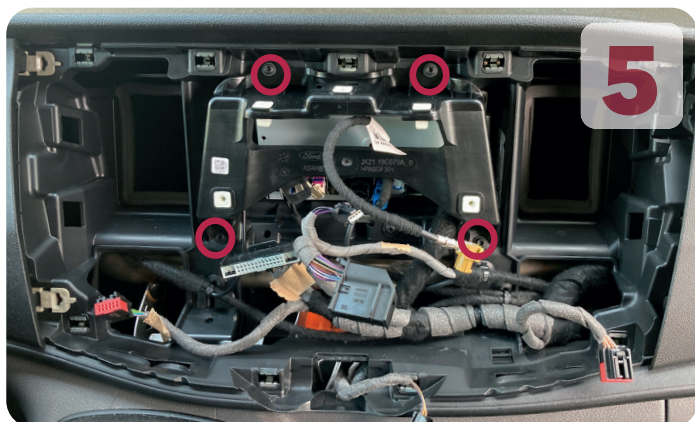

Remove four screws and take out the plastic support bracket.



Remove the connectors and two screws to take out the original control unit.


Steps 7 - 12 are for vehicles with 1-Din radio or without head unit.




Take out the top storage.
! Note : if your Transit is equipped with a tablet or smartphone holder, you need to replace it with this holder. Ford ref. : 2364170




Remove the 1-Din radio or cover.
Remove the frame from the dashboard.

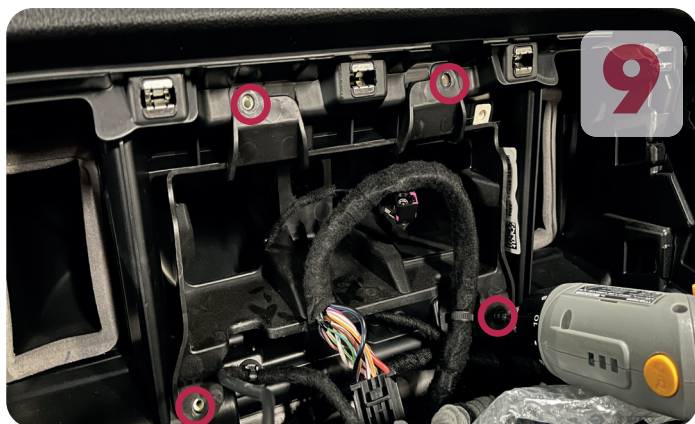

Remove four screws on the plastic support bracket.

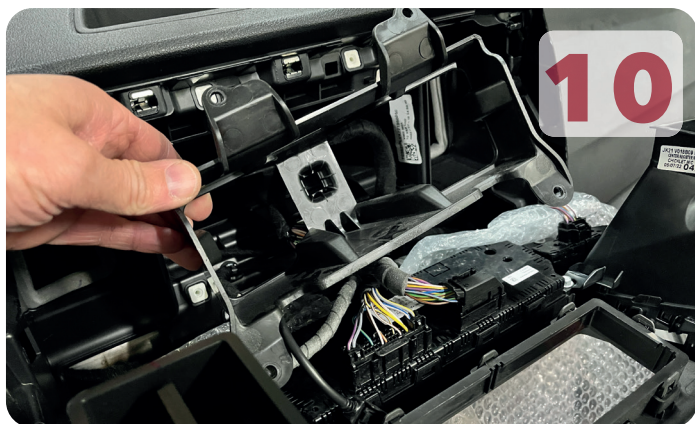

Remove the support bracket from the dashboard.

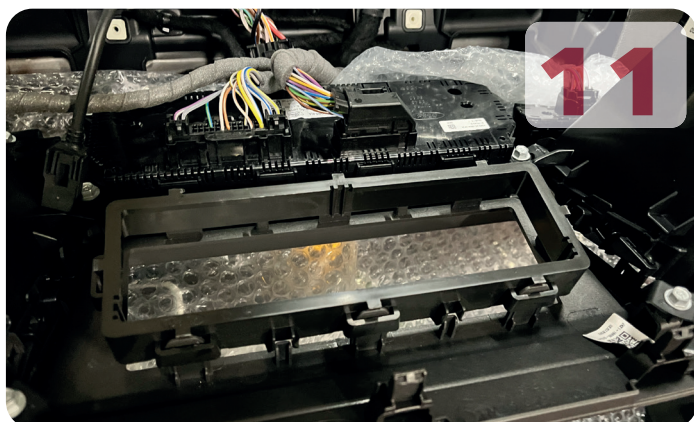


Carefully unclip the plastic bezel on the inside of the trim panel.




Once loose, remove the bezel from the trim.


Make all connections to the vehicle side

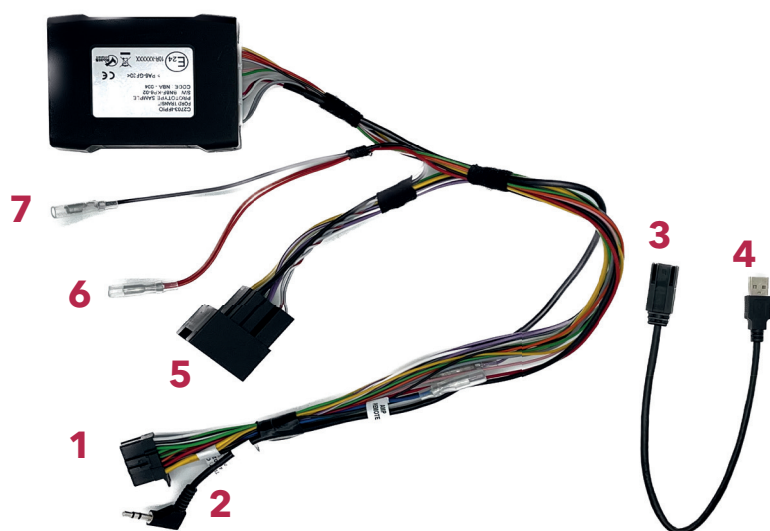

- 1 - Pioneer head unit main connector
- 2 - Steering wheel control input - Connect to backside of the Pioneer head unit
- 3 - Connect to OEM USB socket (only compatible with 1-Din or open dash versions)
- 4 - Connect to the Pioneer USB socket - backside of the Pioneer head unit
- 5 - Connect to the vehicle main radio connector
- 6 - Optional 12v ACC power output connection
- 7 - Optional Ground connection

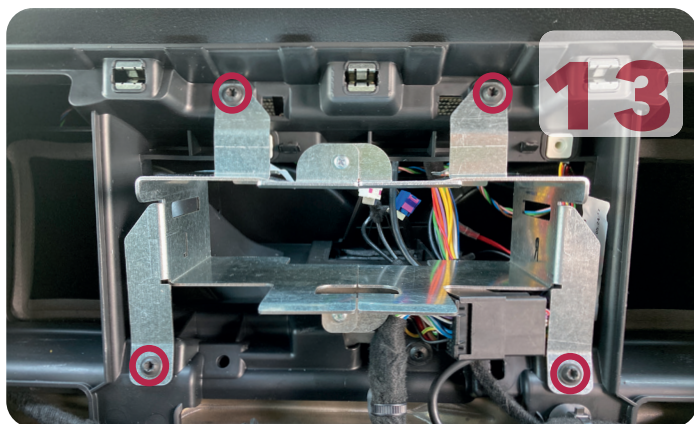

Install the metal support bracket with the four original screws.

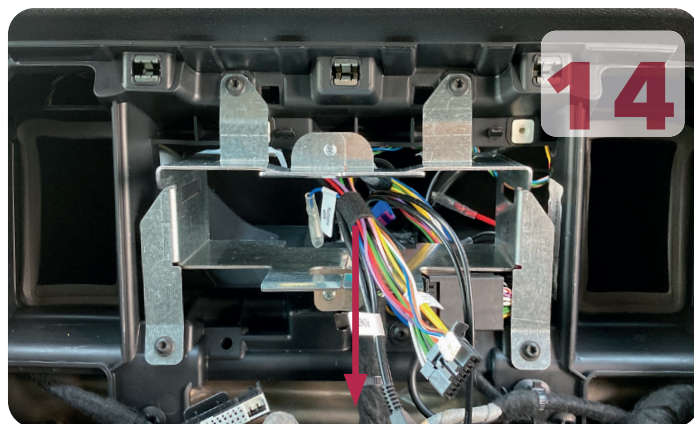

Pull the cables towards the front.

Pioneer




Install the original frame again.
! Note : if your Transit was equipped with a touch screen, you need to replace the frame with the open dash version. Ford ref. : 2598430



Connect all cables to the Pioneer unit.



Slide the unit in the dashboard.
! Caution : Do not push on the screen, this may cause damage.

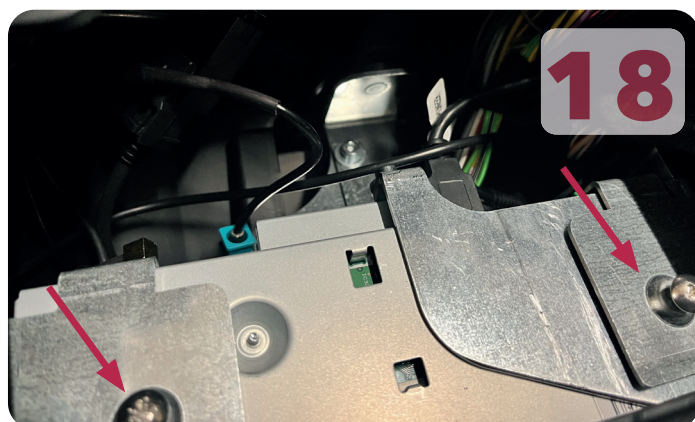

One in the dashboard, look in the opening on top and secure the unit with the two screws on the bracket.



Install the storage tray again.



Final view after installation